











What do the LEDs on the ADC-VDB770 mean?

Status light guide

Note: The ADC-VDB770 does not give an indication when it detects motion or a button press.

LED pattern	Description
Off 	Power off
Solid red 	No local or Internet connection
Blinking red 	Power on, camera booting
Solid green 	Connected to Alarm.com
Blinking green 	Local network connection

LED pattern	Description
<p>Double-blinking blue</p> 	<p>Unable to ring indoor chime</p> <p>For more information about what causes this status, see What does the double-blinking blue LED on the ADC-VDB770 mean?.</p>
<p>Solid yellow</p> 	<p>Cool-Down mode is active</p> <p>For more information about what causes this status, see The ADC-VDB770 is warm to the touch and has a solid yellow LED (Cool-Down mode).</p>
<p>Blinking blue</p> 	<p>WPS mode (press and hold button for 30-35s)</p>
<p>Blinking white</p> 	<p>Wi-Fi Access point mode (press and hold button for 35-40s)</p>
<p>Blinking yellow</p> 	<p>Camera power cycling (press and hold button for 40-45s)</p>
<p>Alternating red & green</p> 	<p>Camera resetting to factory default (press and hold button for 45-50s)</p>

Note: If the indoor chime is enabled for the device, holding down the button will trigger a single indoor chime immediately after being pressed. If desired, the indoor chime can be disabled through the Customer Website before pressing the button to initiate one of the above modes.